


# StudyBed Assembly Instructions

**IMPORTANT: 2 PEOPLE REQUIRED**

## SMALL PARTS

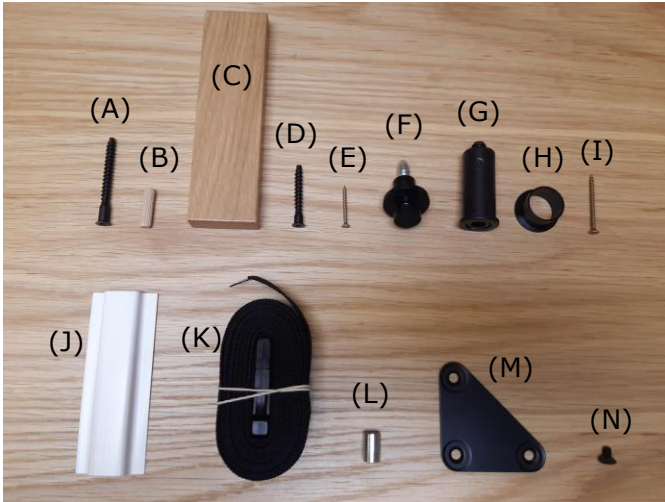

- (A) 70mm Confirmat Screw
- (B) 8mm Dowel
- (C) Stop
- (D) 50mm Confirmat Screw
- (E) Pozi drive screws
- (F) Lock
- (G) Trunnion & Bolt
- (H) Shim
- (I) 50mm Screw
- (J) Strap Channel (not used on singles)
- (K) Mattress strap (not used on singles)
- (L) Silver Trunnion
- (M) Triangular Desk Plate
- (N) Trunnion Screw

Please call us if you are unsure during any part of the process.  
We can guide you by phone or video link.  
Tel: 01844 214484




Lower stretcher. Please note the latest StudyBed models have a stretcher as pictured below.



1. Assemble the body laid on its back using 70 mm confirmat screws (A) and dowels (B). Keep a little loose until all cross sections are inserted.


On 4ft and 4ft 6in models, locate and tighten stops (C) to inside of body sides using 50mm confirmat screws (D)

Fully tighten all the confirmat screws so they are level with the wood.

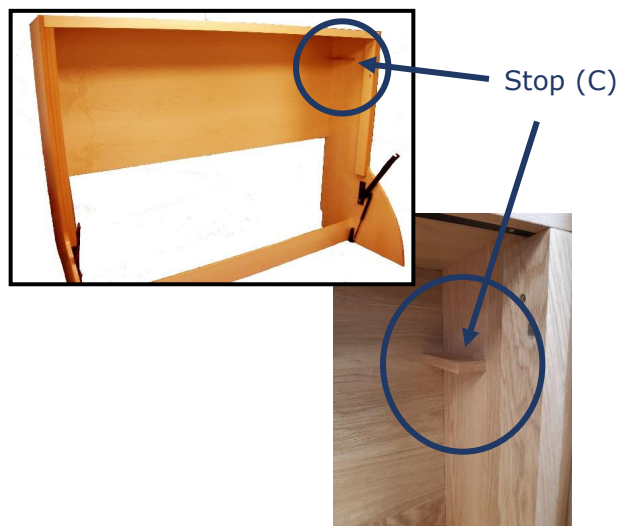

2. Carefully stand the body upright.  
Fix rear of top shelf to back board using  
Pozi drive screws (E).

N.B. For 4ft beds ensure the straight  
edge of the lock is at the back of the bed.

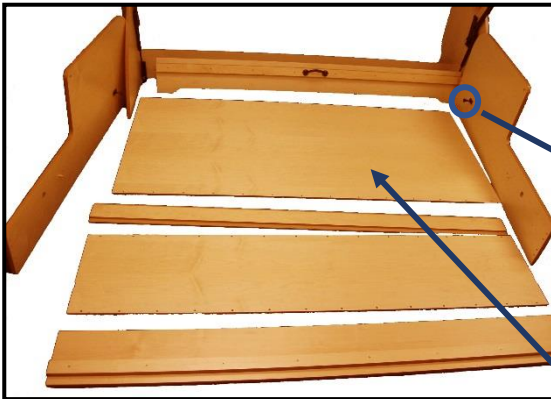

3. Assemble the bed structure using  
70mm screws (A) and dowels (B).

Attach lock (F) using screws provided  
(if not already attached).



NB. Photo shows bed boards for 4ft 6in – other sizes just have one bed cover.

The 4ft 6in model may have a metal tube instead of the middle wooden support rail but  
attaches in the same way, with a bolt inserted through the bedsides.

These boards are added after linking the bed structure with the frame.

4. Push the bed assembly into the body frame, insert the trunnion (G), complete  
with plastic shim (H) and 12mm bolt through the bedside and gently tighten a  
few turns by hand and then using a 10mm allen key. Do the same the other  
side and then, once you are sure the bolts are not cross-threaded, fully  
tighten both sides.

**Be VERY careful when inserting and tightening the 12mm bolts to  
ensure that you do not cross-thread them.**



5. Select preferred facing side of bed cover and place down into bed assembly with the trunnion cut out at rear.

NB. For 4ft 6in beds ensure the 2 covers have the counter sunk side up on both covers to ensure screws don't stand up and possibly tear the mattress.

3ft and 4ft beds only have one cover.



6. Add and secure slats using 50mm screw (I)

Attach mattress strap channels (J) between the 1<sup>st</sup> and 2<sup>nd</sup> slots, 125mm from the end, and thread through straps (K) – this process may have been done already

N.B. Single StudyBed does not have mattress straps and channels


NB. The slats shown in the photo have been superseded with 2 slatted boards.

7. Raise bed section and lock in place.

Insert silver trunnion (L) onto two of the triangular plates (M). Attach one to the outside of one side (right or left) and one to the inside of the other side using trunnion screws (N). Ensure the right angle on the plate is facing the rear of the desk.

Slide in the desk assembly from the appropriate side, allow the desk to come into a horizontal position and secure with other two triangular plates.

Pull down the mechanism arm and hook beneath desk bearer, keeping fingers out of the way. This is best achieved by sitting on the floor and placing both hands approximately 30cm along the mechanism arm, pulling down hard and hooking into place.

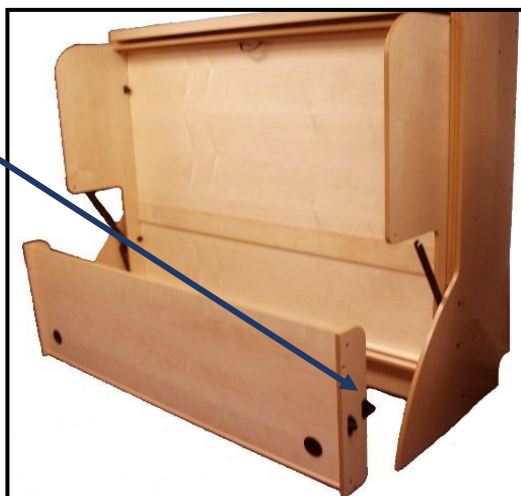

## Dismantling Instructions

- STEP 1 Put into Desk Mode and **lock the catches**
- STEP 2 Pull down the Mechanism Levers each side and swing outwards to detach from desk
- STEP 3 Remove one triangular plate from each side (one from the outside and one from the inside) swing the desk through 90 degrees and remove it
- STEP 4 **Whilst supporting the bed**, undo the locks and lower the bed slowly to the floor
- STEP 5 Remove the slats and the bed cover(s)
- STEP 6 Undo the two main trunnion bolts that attach the bed to the body sides using a 10mm Allen Key
- STEP 7 Slide the Bed Assembly forward and separate the four (five for 4ft 6in) sections
- STEP 8 Remove the pozi drive screws from rear of top shelf. Lower the Main Body Structure so its back is on the floor
- STEP 9 Remove the various screws holding the 5 separate sections together (with 4mm Allen Key)

**It is up to you whether you decide to remove handles, locks, dowels etc. for transportation.**

## Reassembly Instructions

- STEP 1 Rebuild the Body Structure on its back and then raise to normal position
- STEP 2 Assemble the four sections of the bed frame and attach to the bodysides using the grey shim, trunnion and 10mm bolt (taking care not to cross thread)
- STEP 3 Replace the bed cover and slats and raise the bed to the upright position and lock in place
- STEP 4 Attach the desk using the triangular plates (2 people required)
- STEP 5 Pull down the Mechanism Levers each side to attach to desk ...  
**KEEP FINGERS OUT OF THE WAY**